 


SPEEDY BRACKET

CAMERA ROTATING FLASH BRACKET

Thank you for choosing the Vello Speedy Bracket. The Speedy Bracket puts you in control of your lighting whether you're shooting horizontally or vertically, and allows you to switch between the two orientations with just a quick flip of the camera.

Please follow the instructions below to get the most out of your Speedy Bracket and to prevent improper installation which may cause damage to your equipment.

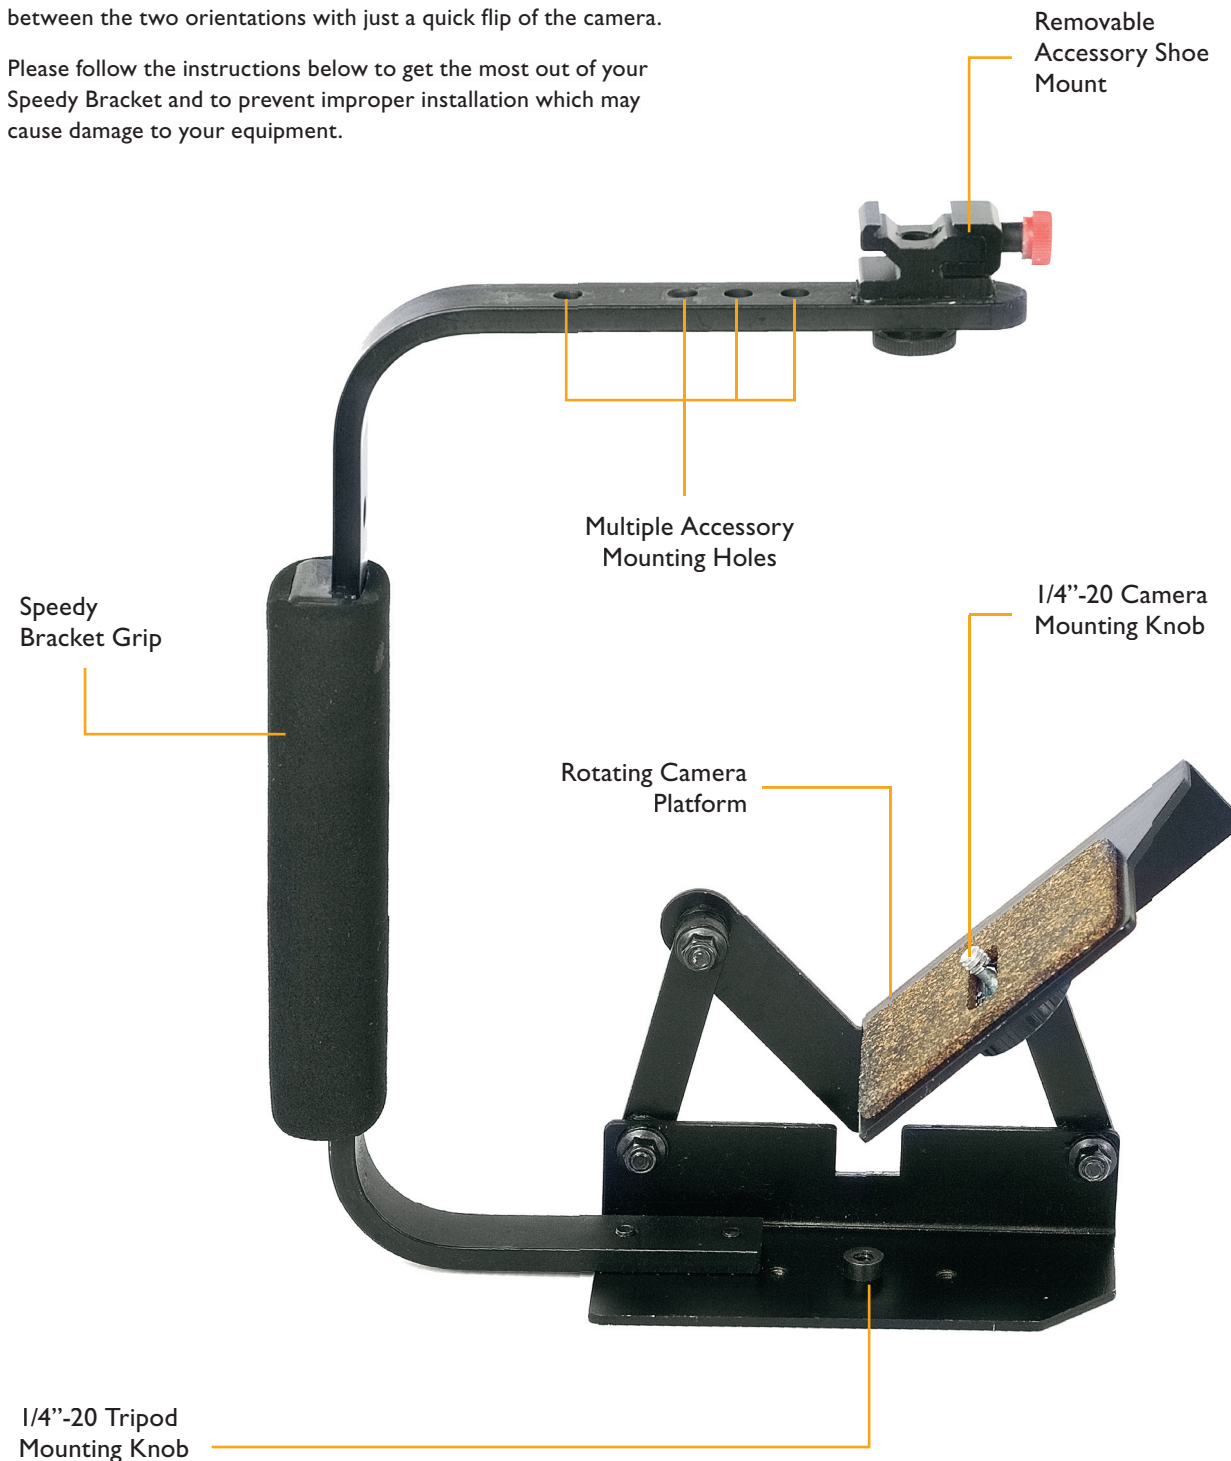

PREPARING YOUR SPEEDY BRACKET FOR MOUNTING

Before mounting your camera for the first time, you will need to attach the adhesive cork pad included.

To attach the cork pad, make sure the camera platform is fingerprint, oil and smudge-free. Peel the backing off the pad and press firmly into place, making sure the pad's slots and holes are aligned with those on the platform.

MOUNTING THE CAMERA

Place your camera on the platform and align your camera's mounting socket with the Speedy Bracket's camera mounting knob. Tighten the knob until firmly connected.

MOUNTING THE FLASH

The Speedy Bracket is equipped with an accessory-shoe mount which can be used to mount your flash unit or TTL cord. To mount your flash or TTL cord, loosen the red knob on the accessory-shoe, insert your flash or TTL cord's hot-shoe foot, and tighten the knob.

Tip: to mount the Nikon SC-28 or SC-29 off-camera shoe cords, remove the cold shoe mount from the flash arm and use the included mounting screw to mount the Cord to the bracket.

 
ADJUSTING THE TENSION

The Speedy Bracket's rotation tension has been preset to accommodate most cameras. However, the use of heavier cameras may require additional tightening. If necessary, use a 3/8" socket wrench to adjust all four lock nuts in successive 1/8" turns until the desired tension is achieved.



USING THE BRACKET FOR HORIZONTAL SHOOTING


Grasp the grip on the Speedy Bracket with your left hand, using your right hand to rotate the camera clockwise to the horizontal position.

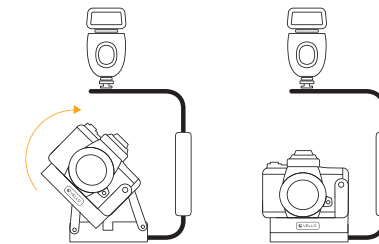

Once in place, you can use your camera's own grip to compose and shoot your photos.

USING THE BRACKET FOR VERTICAL SHOOTING

 Grasp the grip on the Speedy Bracket with your left hand, using your right hand to rotate the camera counterclockwise to the vertical position.

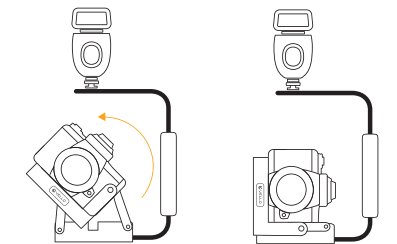

Once in place, you can use your camera's own grip to compose and shoot your photos.

Limited Five-Year Warranty

Vello provides a limited warranty that this product is free from defects in materials and workmanship to the original purchase under normal use for a period of five (5) years from the original purchase date. Vello's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, VELLO MAKES NEITHER ANY EXPRESS WARRANTIES, NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. To obtain a replacement during the time of this warranty, please return the defective item with proof of purchase, along with an RMA number to the place of purchase. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.