



CB-300

QUICKSHOT FLASH BRACKET MANUAL




INTRODUCTION

Thank you for choosing a Vello Rotating Flash Bracket. The Vello CB-300 Rotating Flash Bracket accepts SLR and medium format cameras, allowing you to position a flash directly above the lens in horizontal or vertical orientation. The adjustable flash shoe is capable of accommodating almost any portable flash.

The bracket is all metal yet lightweight. It includes a cork pad to prevent the camera from slipping on the mount. The height of the upright arm of the bracket is adjustable. There is also a 1/4"-20 socket for tripod mounting. Integrated feet allow you to securely set your camera down mid-session. Please follow the instructions below to get the most out of your Vello Rotating Flash Bracket.

FEATURES DIAGRAM

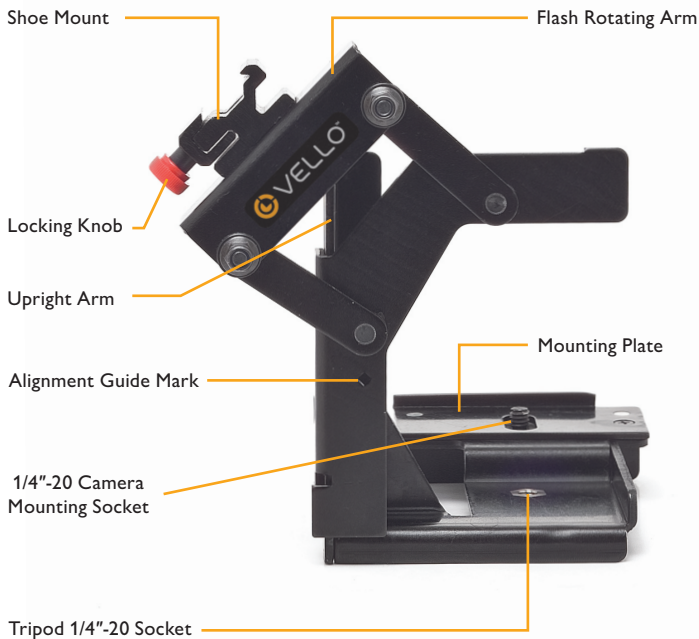

TO MOUNT THE CAMERA



1. Mount the camera to the plate by screwing the mounting knob into your camera's tripod socket.



2. Before tightening the mounting knob, make certain that the camera is flush against the retaining lip of the plate.

The top plate can be removed if necessary to accommodate certain models of larger cameras. Use a screwdriver to remove the screw holding the plate to the bracket.


ADJUSTING THE UPRIGHT ARM

The upright bracket can be adjusted to properly center the flash unit and to accommodate larger cameras.



1. Loosen the two screws on the side of the upright arm.



2. Adjust the bracket's position. The center of the lens should align with the  shaped hole in the bracket.



3. Retighten the screws. The flash will now be centered above the lens when you switch to a vertical orientation.

MOUNTING THE FLASH

The Vello Rotating Flash Bracket features an adjustable cold shoe.



1. Turn the red knob counterclockwise until the shoe mount is open wide enough to accommodate the flash.



2. Tighten the red knob until the flash is secure.



3. Connect your flash to your camera with the appropriate sync cord for your model of flash and camera (not included). Sync cords can be obtained from your photo equipment dealer.

ROTATING THE FLASH



1. The Vello Rotating Flash Bracket allows you to hold your camera as you normally would, right hand holding the camera, ready to press the shutter button.



2. To move from horizontal (landscape) to vertical (portrait) positioning, grasp the flash unit near the shoe mount and pull the rotating arm down clockwise.



3. At the same time, turn the camera to vertical orientation.

ONE-YEAR LIMITED WARRANTY

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.vellogear.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

VELLO is a registered trademark of the Gradus Group.

© 2015 Gradus Group LLC. All Rights Reserved.



All other trademarks are the property of their respective owners.



www.vellogear.com