

Precautions

- Please read and follow the instructions, and keep this manual in a safe place.
- Handle the unit with care.
- Keep this unit away from water and any flammable gases or liquids.
- Clean the unit with only a soft, dry cloth.
- Make sure the item is intact and that there are no missing parts.
- Do not attempt to disassemble or repair the equipment—doing so will void the warranty, and Revo will not be responsible for any damage.
- All images are for illustrative purposes only.

One-Year Limited Warranty

This Revo product is warrantied to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Revo Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Revo along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense. Revo is a registered trademark of the Gradus Group. Product warranty provided by the Gradus Group.

For more information or to arrange service, visit revocinegear.com or call Customer Service at 212-594-2353.

VRS-MULTI



Wired
Video Remote
for Sony Cameras and Camcorders

REVOTM

Locking shutter release: Press halfway to focus, and press fully to release the shutter. Slide the lock in place to keep the shutter button pressed for bulb or continuous shooting. When the camera is set to bulb, the shutter will remain open with the lock engaged. When your camera's drive is set to continuous, the shutter will release continuously (speed varies depending on camera).

Sleep: Put your camera to sleep to conserve battery power, or wake your camera from sleep mode. The activity indicator will be green when in use, and turn off when in sleep mode.


Grid line: Cycles through available grid-line options.

Zoom rocker: Electronic zoom control between wide and telephoto for select Sony cameras with compatible power zoom lenses attached. The rocker switch is pressure sensitive, and the zoom speed will vary depending on how hard the button is pressed.

Start/Stop: Starts and stops video recording.

Overview

- 1 USB Mini-B port
- 2 Activity indicator
- 3 Locking shutter release
- 4 Sleep
- 5 Grid line
- 6 Zoom rocker
- 7 Start/Stop
- 8 1/4"-20 mount
- 9 Remote clip
- 10 S1 remote cable
(3-pin connector)
- 11 S2 remote cable
(Multi Terminal)

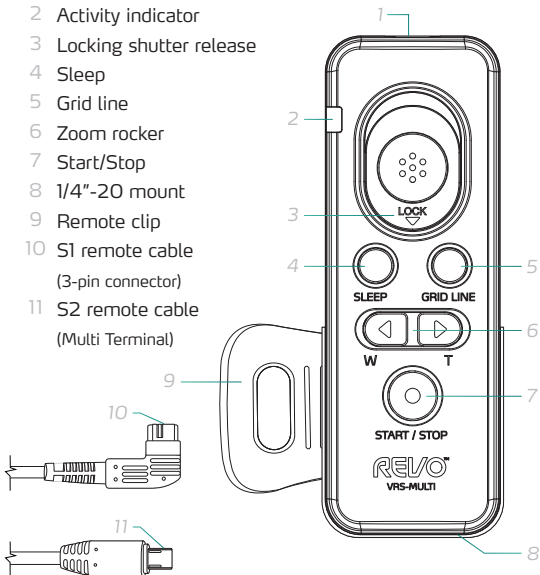

Thank you for choosing Revo.

The Revo VRS-Multi is a wired remote for Sony camcorders, mirrorless and point-and-shoot cameras that utilize lenses with power-zoom capability. Enjoy smooth video operation with the variable-speed zoom rocker, which allows electronic control between wide and telephoto. Whether capturing photo or video, you can trigger the shutter for single shooting, or lock it open when in continuous or bulb modes. Composing your frame is also a breeze with the ability to cycle through your available grid-lines at the touch of a button. The convenient remote clip allows you to mount the remote on your tripod or rig so your controls are always within reach.

Specifications

- Dimensions (H × W × D): 3.9" × 1.4" × 0.6"
(10 × 3.5 × 1.6 cm)
- Weight: 0.9 oz. (26 g)
- Cable length: 3.3' (1 m)